

Datasheet

Ardbox HF+

LoRa Family




Industrial Shields®

Technical Features CONECTABLE PLC ARDUINO 24Vcc ARDBOX


MODEL TYPES	Ardbox Analog HF+ LoRa / Ardbox Relay HF+ LoRa
Input Voltage	12 to 24Vdc (Fuse protection (2.5A) Polarity protection)
Input rated voltage	24Vdc
Rated Power	30 W
I max.	15A
Size	100x45x115
Clock Speed	16MHz
Flash Memory	32KB of which 4KB used by bootloader
SRAM	2.5KB
EEPROM	1KB
Communications	USB, RS485, RS232, SPI, Max232, Max485, LoRa
USB consideration!	Only for uploading or debugging, NOT connected as a serial. Cannot be working in a final application

Analog Version Pinout

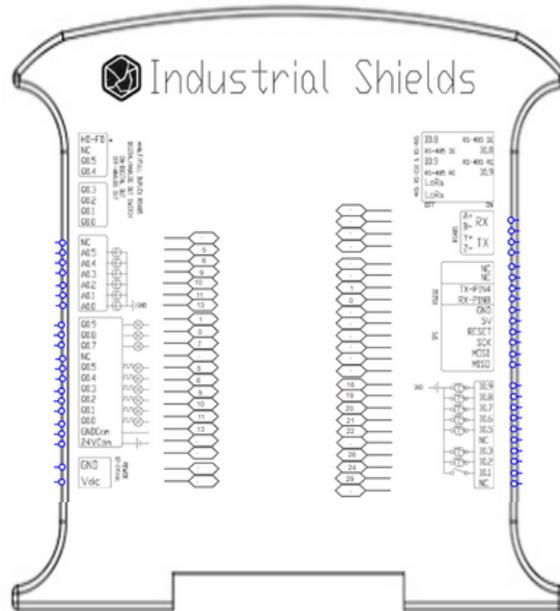

HS+: Hardware Serial
HD+: Half Duplex
SS+: Software Serial
FD+: Full Duplex

Relay Version Pinout

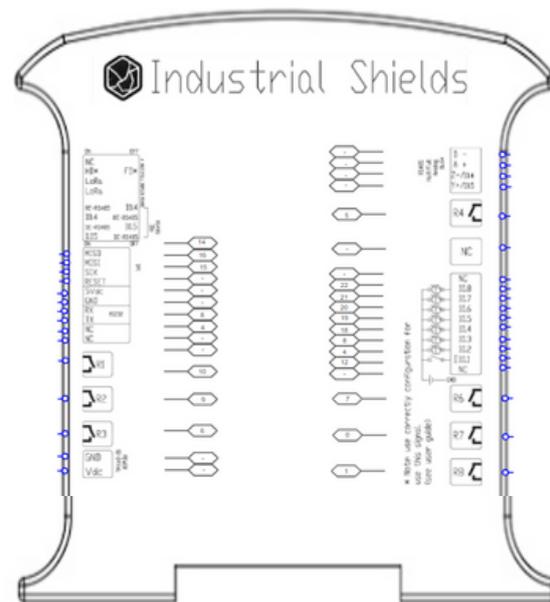

HS+: Hardware Serial
HD+: Half Duplex
SS+: Software Serial
FD+: Full Duplex



General Features

Power supply voltage	DC power supply	12 to 24Vdc
Operating voltage range	DC power supply	11.4 to 25.4Vdc
Power consumption	DC power supply	30 W MAX.
External power supply	Power supply voltage	24Vdc
	Power supply capacity	700mA
Insulation resistance	20MΩ min.at 500Vdc between the AC terminals and the protective earth terminal.	
Dielectric strength	2.300 VAC at 50/60 Hz for one minute with a leakage current of 10mA max. Between all the external AC terminals and the protective ground terminal.	
Shock resistance	80m/s ² in the X, Y and Z direction 2 times each.	
Ambient temperature (operating)	0° to 60°C	
Ambient humidity (operating)	10% to 90% (no condensation)	
Ambient environment (operating)	With no corrosive gas	
Ambient temperature (storage)	-20° to 60°C	
Power supply holding time	2ms min.	
Weight	350g max.	

ANALOG I/O

INPUTS (x8)

An/Dig Input 10bit (0-10Vcc) - (x7)	0 to 10Vdc Input Impedance: 39K Separated PCB ground Rated Voltage: 10Vdc 7 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc
--	--

Digital Input (24Vcc) - (x1)	7 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc
-------------------------------------	--

Expandability

I2C: 127 elements - ModbusRTU RS485: 32 elements - LoRa

OUTPUTS (x9)

Analog Output 8bit (0-10Vcc) - (x6)	0 to 10Vdc I max: 20 mA Separated PCB ground Rated Voltage: 10Vdc * The Analog outputs can also work as Digital outputs
--	---

Digital Isolated Output (24Vcc) - (x3)	5 to 24Vdc I max: 70 mA Galvanic Isolation Diode Protected for Relay Rated Voltage: 24Vdc
---	---

PWM Isolated Output 8bit (24Vcc) - (x6)	5 to 24Vdc I max: 70 mA Galvanic Isolation Diode Protected for Relay Rated Voltage: 24Vdc * The PWM outputs can also work as Digital outputs
--	---

RELAY I/O

INPUTS (x8)

An/Dig Input 10bit (0-10Vcc) - (x7)	0 to 10Vdc Input Impedance: 39K Separated PCB ground Rated Voltage: 10Vdc 7 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc
--	--

Digital Input (24Vcc) - (x1)	7 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc
-------------------------------------	--

Expandability

ModbusRTU RS485: 32 elements - LoRa

OUTPUTS (x9)

Digital Isolated Output Relay - (x7)	250Vac I max: 5A Galvanic Isolation Diode protected for Relay I max 30Vdc: 3A
---	---

Analog Output 8bit (0-10Vcc) - (x2)	0 to 10Vdc I max: 20 mA Separated PCB ground Rated Voltage: 10Vdc * The Analog outputs can also work as Digital outputs
--	---

Performance Specifications

Arduino Board	Arduino Leonardo
Control method	Stored program method
I/O control method	Combination of the cyclic scan and immediate refresh processing methods.
Programming language	Arduino IDE. Based on wiring (Wiring is an Open Source electronics platform composed of a programming language. "similar to the C")
Microcontroller	ATmega32U4
	http://arduino.cc/en/Tutorial/HomePage

Install Arduino IDE and the Industrial Shields boards

The steps to follow to install our equipment's to Arduino IDE are:

- Open the Arduino IDE, versión 1.8.0 or superior. If you don't have it yet , you can download here <https://www.arduino.cc/en/Main/Software> .
- Press the "Preferences" option to "File" menu and open the preferences window.
- In the text box "Additional boards manager URLs", add the direction: http://apps.industrialshields.com/main/arduino/boards/package_industrialshields_index.json
- Close the preferences window with the "OK" button.
- Click on "Tools" menu, and open the "Boards" submenu, and click the "Boards Manager" option, to open the Boards Manager window.
- Search "industrialshields" to the search filter and select to the list and click "Install"
- Close the "Boards Manager". Once it is performed that steps, you are available to select each PLC that you wish to work on "Tools" -> "Boards" : M-Duino...

To get more information:

<https://www.industrialshields.com/first-steps-with-the-industrial-arduino-based-plc-s-and-the-panel-pc-s-raspberry-pi-based#boards>

Warnings



Unused pins should not be connected. Ignoring the directive may damage the controller.

Before using this product, it is the responsibility of the user to read the product's User Guide and all accompanying documentation.

Industrial Shields PLCs must be powered between 12Vdc and 24Vdc. If a higher voltage is supplied to the equipment can suffer irreversible damage.

Maintenance must be performed by qualified personnel familiarized with the construction, operation, and hazards involved with the control.

Maintenance should be performed with the control out of operation and disconnected from all sources of power.

The Industrial Shields Family PLCs are Open Type Controllers. It is required that you install the M-Duino PLC in a housing, cabinet, or electric control room. Entry to the housing, cabinet, or electric control room should be limited to authorized personnel.

Inside the housing, cabinet or electric control room, the Industrial Shields PLC must be at a minimum distance from the rest of the components of a minimum of 25 cm, it can be severely damaged.

Failure to follow these installation requirements could result in severe personal injury and/or property damage. Always follow these requirements when installing M-Duino family PLCs.

In case of installation or maintenance of the M-Duino please follow the instructions marked in the Installation and Maintenance section on the User Guide.

Do not disconnect equipment when a flammable or combustible atmosphere is present. Disconnection of equipment when a flammable or combustible atmosphere is present may cause a fire or explosion which could result in death, serious injury and/or property damage.

Symbology

	Indicates that the equipment is suitable for direct current only; to identify relevant terminals
	Indicates that the equipment is suitable for alternating current only; to identify relevant terminals
	To identify the control by which a pulse is started.
	To identify an earth (ground) terminal in cases where neither the symbol 5018 nor 5019 is explicitly required.
	To identify the switch by means of which the signal lamp(s) is (are) switched on or off.
	CE marking indicates that a product complies with applicable European Union regulations
	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
	To indicate hazards arising from dangerous voltages

Technical Support

You can contact with us using the best channel for you:



support@industrialshields.com



www.industrialshields.com



Visit our Blog, Forum or Ticketing system



Use our chat service



Check the user guides



Visit our Channel

