



INDUSTRIAL SHIELDS

Touchberry 7" SPARTAN

User Guide 017002400100

10 Configurable I/Os – RS485 – UPS
Included



Touchberry 7" SPARTAN User Guide

Revised November 2020

Preface

This User Guide is been implemented by Boot & Work, S.L. working under the name Industrial Shields.

Purpose of the manual

The information contained in this manual can be used as a reference to operating, to functions, and to the technical data of the signal modules, power supply modules and interface modules.

Intended Audience

This User Guide is intended for the following audience:

- Persons in charge of introducing automation devices.
- Persons who design automation systems.
- Persons who install or connect automation devices.
- Persons who manage working automation installation.



Warnings:

- Unused pins should not be connected. Ignoring the directive may damage the controller.
- Improper use of this product may severely damage the Panel PC.
- Refer to the Panels User Guide regarding wiring considerations.
- Before using this product, it is the responsibility of the user to read the product's User Guide and all accompanying documentation.
- Maintenance must be performed by qualified personnel familiarized with the construction, operation, and hazards involved with the control.
- Maintenance should be performed with the control out of operation and disconnected from all sources of power.
- Care should be taken when servicing electrostatic sensitive components. The manufacturer's recommendations for these components should be followed.
- The Panel PC family are Open Type panels. It is required that you install Panel PC in a housing, cabinet, or electric control room. Entry to the housing, cabinet, or electric

control room should be limited to authorized personnel. Failure to follow these installation requirements could result in severe personal injury and/or property damage. Always follow these requirements when installing Panel PC.

- In case of installation or maintenance of the Touchberry 7" please follow the instructions marked in the Installation and Maintenance section.
- Do not disconnect equipment when a flammable or combustible atmosphere is present. Disconnection of equipment when a flammable or combustible atmosphere is present may cause a fire or explosion which could result in death, serious injury and/or property damage.



Avertissements:

- Les broches non utilisées ne doivent pas être connectées. Ignorer la directive peut endommager le contrôleur.
- Une utilisation incorrecte de ce produit peut endommager gravement le contrôleur.
- Reportez-vous au Guide de l'utilisateur du Panel PC pour les considérations de câblage.
- Avant d'utiliser ce produit, il incombe à l'utilisateur de lire le Guide de l'utilisateur du produit et la documentation qui l'accompagne.
- La maintenance doit être effectuée par personnel qualifié familiarisé avec la fabrication, le fonctionnement et les dangers liés au contrôleur.
- La maintenance doit être effectuée avec l'équipement hors service et déconnectée de toutes les sources d'alimentation.
- Faites attention lors de l'entretien des composants sensibles à l'électricité statique. Les recommandations du fabricant pour ces composants doivent être suivies.
- Les automates de la famille Panel PC sont des contrôleurs de type ouvert. Il est nécessaire d'installer l'automate Panel PC dans un boîtier, une armoire ou une salle de contrôle électrique. L'accès au boîtier, à l'armoire ou à la salle de commande électrique doit être limité au personnel autorisé. Le non-respect de ces exigences d'installation peut entraîner des blessures graves et/ou des dommages matériels importants. Respectez toujours ces exigences lors de l'installation des automates de la Touchberry 7".
- En cas d'installation ou de maintenance du Touchberry 7", veuillez suivre les instructions indiquées dans la section Installation et Maintenance.
- Ne débranchez pas l'équipement en présence d'une atmosphère inflammable ou combustible. La déconnexion de l'équipement en présence d'une atmosphère inflammable ou combustible peut provoquer un incendie ou une explosion pouvant entraîner la mort, des blessures graves et/ou des dommages matériels.

Application Considerations and Warranty

Read and Understand this Manual

Please read and understand this manual before using the product. Please consult your comments or questions to Industrial Shields before using the product.

Application Consideration

THE PRODUCTS CONTAINED IN THIS DOCUMENT ARE NOT SAFETY RATED. THEY SHOULD NOT BE RELIED UPON AS A SAFETY COMPONENT OR PROTECTIVE DEVICE FOR ENSURING SAFETY OF PERSONS, AS THEY ARE NOT RATED OR DESIGNED FOR SUCH PURPOSES.

Please know and observe all prohibitions of use applicable to the products.

FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, NEVER USE THE INDUSTRIAL SHIELDS PRODUCTS.

NEVER USE THE INDUSTRIAL SHIELDS PRODUCTS BEFORE THEY ARE PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Industrial Shields shall not be responsible for conformity with any codes, regulations or standards that apply to the combination of products in the customer's application or use of the product.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses may be suitable for the products:

- Systems, machines, and equipment that could present a risk to life or property.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installation subject to separate industry or government regulations.
- **WARNING:** On outdoor operations, locations involving potential chemical contamination or electrical interference, conditions or uses not described in this document please contact Industrial Shields for further information.

At the customer's request, INDUSTRIAL SHIELDS will provide applicable third-party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the system, machine, end product, or other application or use.

Intended use or of Industrial Shields products

Consider the following:

Industrial Shields products should only be used for the cases of application foreseen in the catalogue and the associated technical documentation. If third-party products and components are used, they must have been recommended or approved by Industrial Shields.

The correct and safe operation of the products requires that your transport, storage, installation, assembly, operation and maintenance have been carried out in a correct It must respect the permissible ambient conditions. You should also follow the indications and warnings that appear in the associated documentation.

The product / system dealt with in this documentation should only be handled or manipulated by qualified personnel for the task entrusted and observing what is indicated in the documentation corresponding to it, particularly the safety instructions and warnings included in it. Due to their training and experience, qualified personnel are in a position to recognize risks resulting from the handling or manipulation of such products / systems and to avoid possible hazards.

Disclaimers

Weights and Dimensions

Dimensions and weights are nominal and they are not used for manufacturing purposes, even when tolerances are shown.

Performance Data

The performance data given in this manual is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of INDUSTRIAL SHIELDS's test conditions, and the users most correlate it to actual application requirements. Actual performance is subject to the INDUSTRIAL SHIELDS Warranty and Limitations of Liability.

Change in Specifications

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when features are changed, or published ratings or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special numbers may be assigned to fix or stablish key specifications for your application on your request. Please consult with your INDUSTRIAL SHIELDS representative at any time to confirm actual specifications of purchased products.

Errors and Omissions

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

The control and drive components of an Industrial Shields Panel PC are approved for industrial and commercial use in industrial line supplies. Their use in public line supplies requires a different configuration and/or additional measures. These components may only be operated in closed housings or in higher-level control cabinets with protective covers that are closed, and when all of the protective devices are used. These components may only be handled by qualified and trained technical personnel who are knowledgeable and observe all of the safety information and instructions on the components and in the associated technical user documentation. When carrying out a risk assessment of a machine in accordance with the EU Machinery Directive, the machine manufacturer must consider the following residual risks associated with the control and drive components of a PDS.

1. Unintentional movements of driven machine components during commissioning, operation, maintenance, and repairs caused by, for example: – Hardware defects and/or software errors in the sensors, controllers, actuators, and connection technology – Response times of the controller and drive – Operating and/or ambient conditions not within the scope of the specification – Condensation / conductive contamination – Parameterization, programming, cabling, and installation errors – Use of radio devices / cellular phones in the immediate vicinity of the controller – External influences / damage.
2. Exceptional temperatures as well as emissions of noise, particles, or gas caused by, for example: – Component malfunctions – Software errors – Operating and/or ambient conditions not within the scope of the specification – External influences / damage.
3. Hazardous shock voltages caused by, for example: – Component malfunctions – Influence of electrostatic charging – Induction of voltages in moving motors – Operating and/or ambient conditions not within the scope of the specification – Condensation / conductive contamination – External influences / damage
4. Electrical, magnetic and electromagnetic fields generated in operation that can pose a risk to people with a pacemaker, implants or metal replacement joints, etc. if they are too close.
5. Release of environmental pollutants or emissions as a result of improper operation of the system and/or failure to dispose of components safely and correctly.

Warranty and Limitations of Liability

Warranty

Industrial Shields's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by Industrial Shields.

INDUSTRIAL SHIELDS MAKES NO REPRESENTATION OR WARRANTY, EXPRESSED OR IMPLIED, REGARDING MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. INDUSTRIAL SHIELDS DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED

Limitations of Liability

INDUSTRIAL SHIELDS SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

IN NO EVENT SHALL INDUSTRIAL SHIELDS BE RESPONSIBLE FOR WARRANTY, REPAIR OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS INDUSTRIAL SHIELDS'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Table of Contents

1	General Description Touchberry 7" SPARTAN	10
1.1	Touchberry 7" SPARTAN pinout.....	10
1.2	Mechanical dimension	11
1.3	Touchberry 7" SPARTAN pin layout:	12
1.4	Touchberry 7" SPARTAN Jumpers Operation:	13
2	General Jumpers configuration (General Settings).....	14
2.1	General Jumper Configuration. Left zone (General settings) :.....	15
2.2.	General Jumper Configuration. Right zone (I/Os settings) :.....	16
2.2.	General Jumper Configuration. RS-232 & RS-485 configuration (I/Os settings)	18
3	Symbology	19
4	How to connect the touch Screen of the Touchberry 7" SPARTAN.....	20
5	How to connect the Touchberry 7" SPARTAN to an external Power Supply.....	20
6	Hardware TEST	22
6.1.1	Common library TEST	22
6.1.2	IOs TEST	25
6.1.3	TTL TEST.....	26
6.1.4	RS-485 TEST	27
6.1.5	Fan Test	28
7	Installation and Maintenance	29
8	Revision Table	32

1 General Description Touchberry 7" SPARTAN

1.1 Touchberry 7" SPARTAN pinout


A compact Panel PC in Open Source Hardware technology.
With different Input/Outputs units.

Next it is showed a table with the connection between the Raspberry Pi 4B pinout and the Touchberry 7" SPARTAN Panel PC Pinout.




SPARTAN Pinout	Raspberry Pi 4B GPIO
11	GPIO17
12	GPIO18
13	GPIO27
16	GPIO23
18	GPIO24
22	GPIO25
24	GPIO8
26	GPIO7
29	GPIO5
31	GPIO6
32	GPIO12
33	GPIO13
35	GPIO19
36	GPIO16
37	GPIO26
38	GPIO20
40	GPIO21

1.2 Mechanical dimension

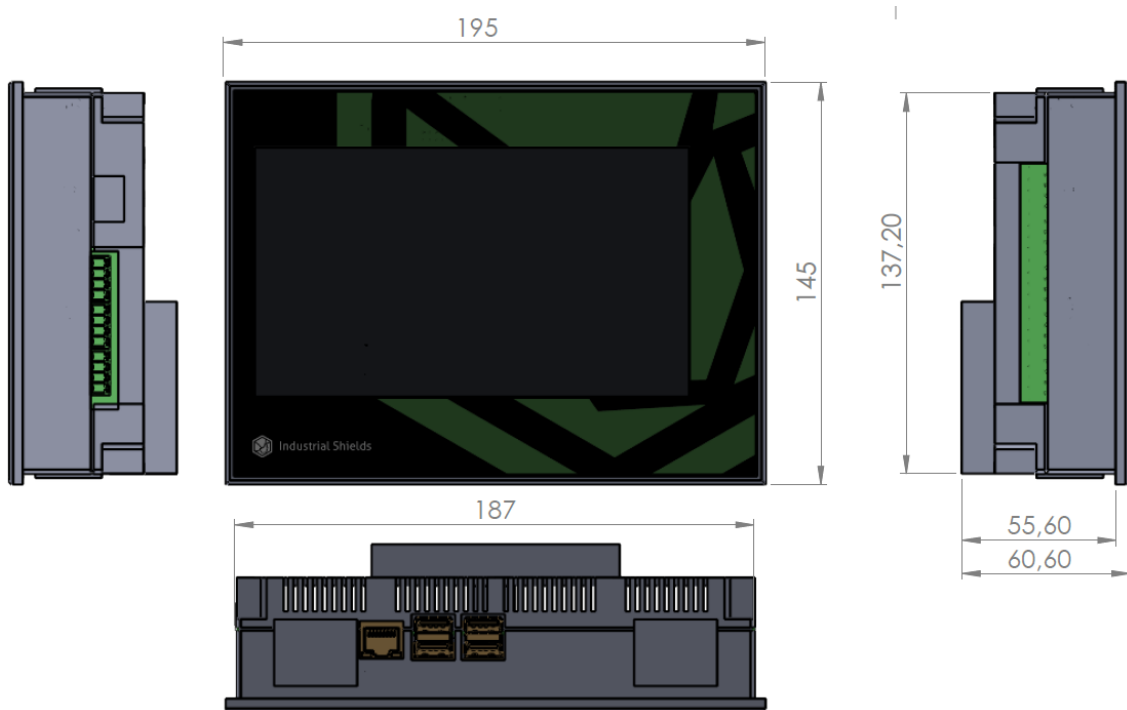


Panel Touch 7" is designed to be placed build-in an electrical box. Next it is showed the dimensions to be installed properly:

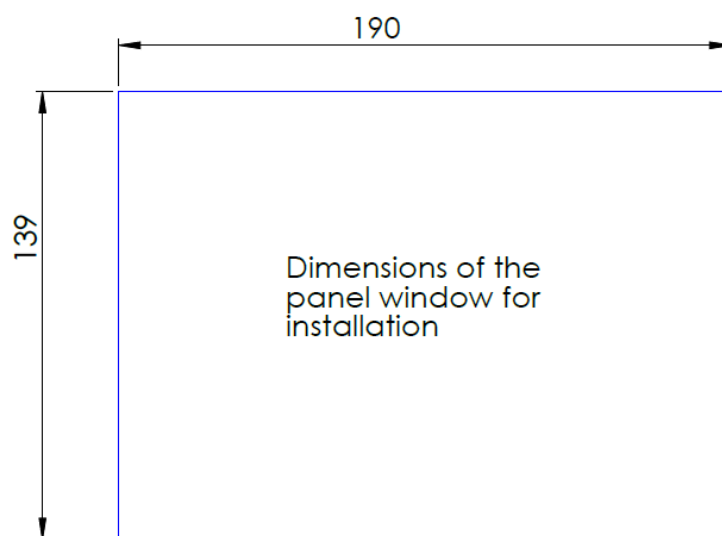

1.3 Touchberry 7" SPARTAN pin layout:

The following image shows the distribution of the Panel PC pins (in the image you can see the Panel PC from the back).

On the right side are the GPIO pins of the Panel PC while the set of pins on the left corresponds to the communication and power pins of the equipment.

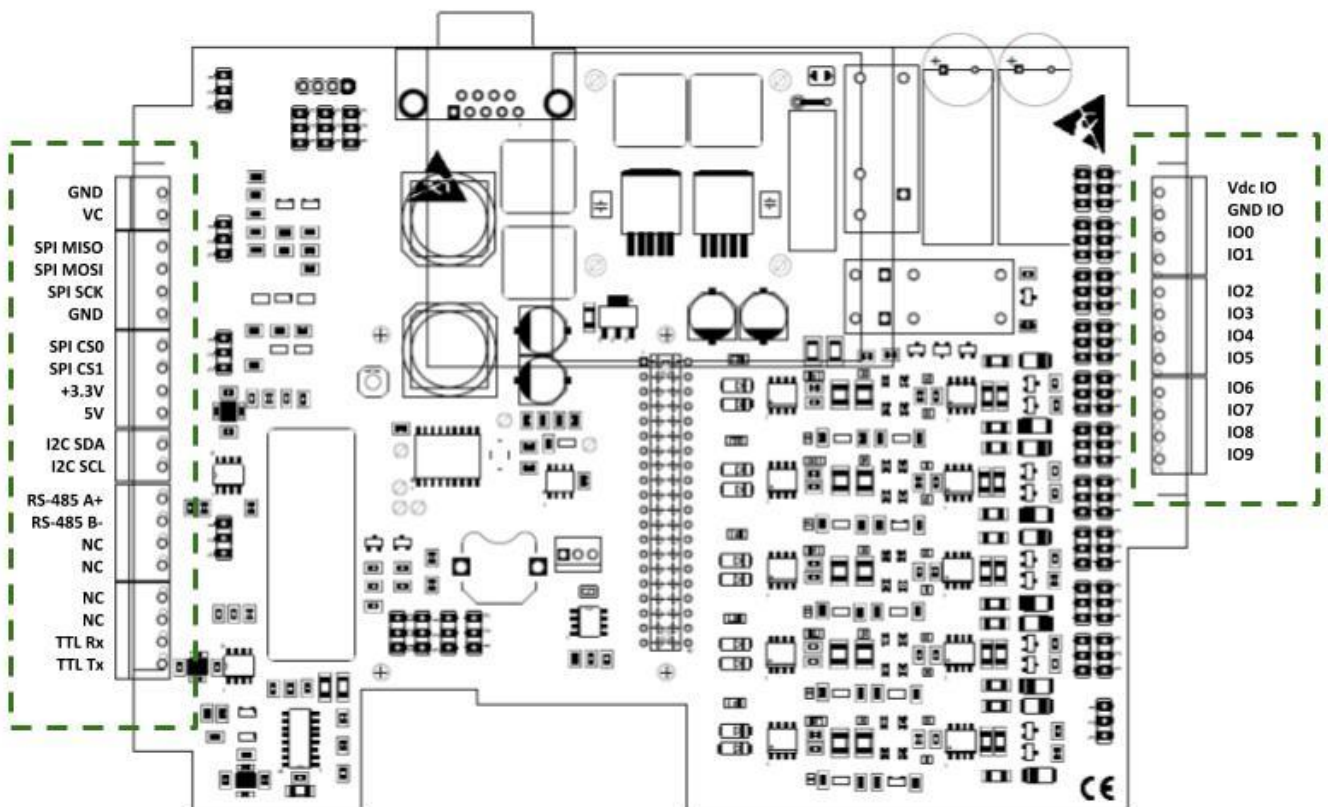


1.4 Touchberry 7" SPARTAN Jumpers Operation:

The configuration of the jumpers is explained below.


In each configuration the different positions are explained and here you can find a graphic reference to the configuration tables of section 2:

Example Jumper 1	
VIO = VCOM	█
Enable 1	█
VIO external	

Example Jumper 2	
VIO = VCOM	
Enable 1	█
VIO external	

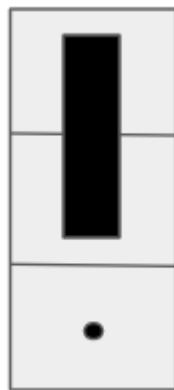

Example Jumper 1

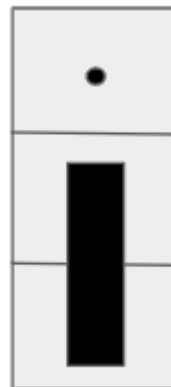


Example Jumper 2

Here you are selecting between the two possible configurations that the jumper allows you.

Using the Jumper Block you can select in which pins are you allowing the electricity to flow.

2 General Jumpers configuration (General Settings)

In the following image, you can see the position of the jumpers on the board located inside the Panel PC:

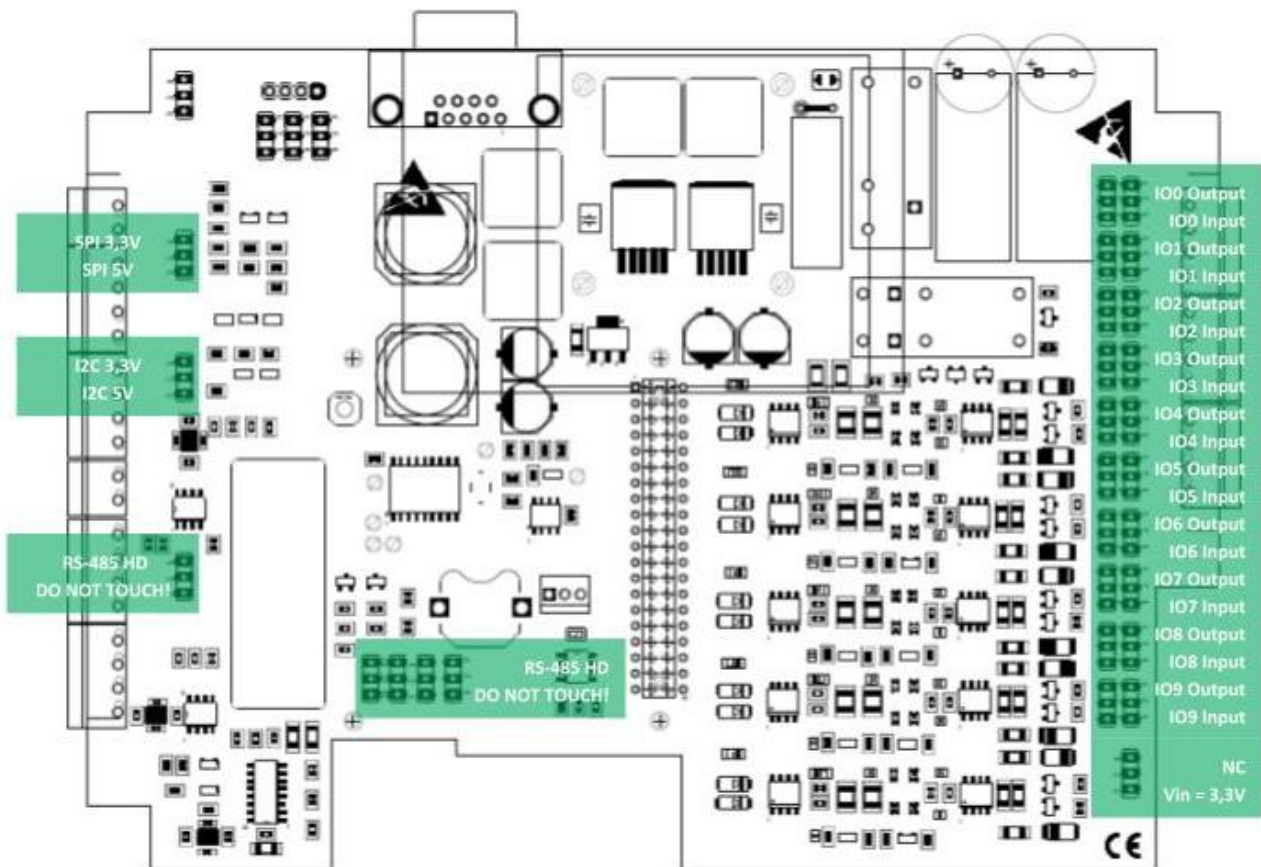

2.1 General Jumper Configuration. Left zone **(General settings)**:

Named from top to bottom:

Left Jumper 3
SPI 3.3 V
Enable 3
SPI 5V

Left Jumper 4 enables SPI at 3.3V or 5V. Typical configurations showed below:

Left Jumper 3	
SPI 3.3 V	<input checked="" type="checkbox"/>
Enable 3	<input type="checkbox"/>
SPI 5V	<input type="checkbox"/>

This configuration enables SPI at 3.3V.

Left Jumper 3	
SPI 3.3 V	<input type="checkbox"/>
Enable 3	<input checked="" type="checkbox"/>
SPI 5V	<input type="checkbox"/>

This configuration enables SPI at 5V.

Left Jumper 4
I2C 3.3 V
Enable 4
I2C 5V

Left Jumper 4 enables I2C at 3.3V or 5V. Typical configurations showed below:

Left Jumper 4	
I2C 3.3 V	<input checked="" type="checkbox"/>
Enable 4	<input type="checkbox"/>
I2C 5V	<input type="checkbox"/>

This configuration enables I2C at 3.3V.

Left Jumper 4	
I2C 3.3 V	<input type="checkbox"/>
Enable 4	<input checked="" type="checkbox"/>
I2C 5V	<input type="checkbox"/>

This configuration enables I2C at 5V.

Left Jumper 5	
RS-485 Available	
Enable 5	
NC	

Left Jumper 5 enables and disables RS-485. **Do not touch!** Typical configuration showed below:

Left Jumper 5	
RS-485 Enabled	<input checked="" type="checkbox"/>
Enable 5	<input type="checkbox"/>
RS-485 Disabled	<input type="checkbox"/>

Left Jumper 5	
RS-485 Enabled	<input type="checkbox"/>
Enable 5	<input checked="" type="checkbox"/>
RS-485 Disabled	<input type="checkbox"/>

This configuration enables RS-485.

This configuration disables RS-485..

2.2. General Jumper Configuration. Right zone (I/Os settings):

By default, IO0 through IO4 are configured as Inputs, while IO5 through IO9 are configured as Outputs

Named from top to bottom.

Right Jumper 1	
Left	Right
OUT	OUT
GPI025	IO0
IN	IN

Right Jumper 2	
Left	Right
OUT	OUT
GPI012	IO1
IN	IN

Right Jumper 3	
Left	Right
OUT	OUT
GPI016	IO2
IN	IN

Right Jumper 4	
Left	Right
OUT	OUT
GPI020	IO3
IN	IN

Right Jumper 5	
Left	Right
OUT	OUT
GPI021	I04
IN	IN

Right Jumper 6	
Left	Right
OUT	OUT
GPI026	I05
IN	IN

Right Jumper 7	
Left	Right
OUT	OUT
GPI019	I06
IN	IN

Right Jumper 8	
Left	Right
OUT	OUT
GPI013	I07
IN	IN

Right Jumper 9	
Left	Right
OUT	OUT
GPI06	I08
IN	IN

Right Jumper 10	
Left	Right
OUT	OUT
GPI05	I09
IN	IN

From Right Jumper 1 to Right Jumper 10, the functionality is the same. You can enable IOs as Outputs or Inputs. Typical example with Right Jumper 1:

Right Jumper 1	
Left	Right
OUT	OUT
GPI025	I00
IN	IN

This configuration enables I00 as an Output.

Right Jumper 1	
Left	Right
OUT	OUT
GPI025	I00
IN	IN

This configuration enables I00 as an Input.

Right Jumper 11
Not Connected
VIN
VIN 3.3V

Right Jumper 11



WARNING: Touchberry 7" & Tinkertouch 7" ONLY HANDLES 3.3Vdc Vin, NC is only meant for prototyping, don't connect Vin at NC!

Right Jumper 11	
VIN 5V	
VIN	
VIN 3.3V	


This configuration enables Vin at 5V

Right Jumper 11	
VIN 5V	
VIN	
VIN 3.3V	

This configuration enables Vin at 3.3V

2.2. General Jumper Configuration. RS-232 & RS-485 configuration (I/Os settings)



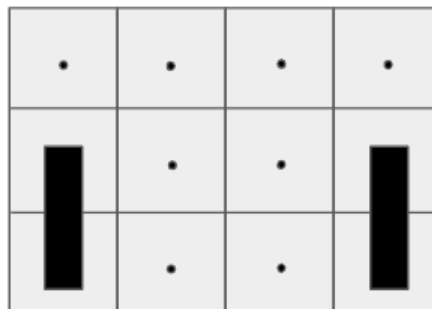





RS-485 Configuration (DO NOT TOUCH!)



NOTE: If you modify this configuration, RS-485 will be completely disabled.

3 Symbology

Table that includes all the symbology that is used in the serigraph of the Touchberry 7” SPARTAN PANEL PC:

Symbol	Standard No. / Standard Title	Standard Reference No. / Symbol Title	Symbol Meaning
	IEC 60417 / Graphical symbols for use on equipment	5031 / Direct Current	Indicates that the equipment is suitable for direct current only; to identify relevant terminals
	IEC 60417 / Graphical symbols for use on equipment	5032 / Alternating Current	Indicates that the equipment is suitable for alternating current only; to identify relevant terminals
	IEC 60417 / Graphical symbols for use on equipment	5130 / Pulse General	To identify the control by which a pulse is started.
	IEC 60417 / Graphical symbols for use on equipment	5017 / Earth, Ground	To identify an earth (ground) terminal in cases where neither the symbol 5018 nor 5019 is explicitly required.
	IEC 60417 / Graphical symbols for use on equipment	5115 / Signal lamp	To identify the switch by means of which the signal lamp(s) is (are) switched on or off.
	Medical Devices Directive 93/42/EEC	CE Marking	CE marking indicates that a product complies with applicable European Union regulations
	ISO 7000/ Graphical symbols for use on equipment	0434B / Warning symbol	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
	ISO 7000/ Graphical symbols for use on equipment	5036 / Dangerous Voltage	To indicate hazards arising from dangerous voltages

4 How to connect the touch Screen of the Touchberry 7" SPARTAN

- Connect USB port from the Panel PC to one of the empty USB ports.


NOTE:

Panel PCs 7" use USB-USB cable.




5 How to connect the Touchberry 7" SPARTAN to an external Power Supply

- Touchberry 7"SPARTAN is 12-24Vdc supplied. **IMPORTANT: The polarity IS NOT REVERSAL!**
- Make sure that the live and GND connector of the power supply match the PLC.
- Make sure that the power supply mains output is **not higher than 24Vdc**.

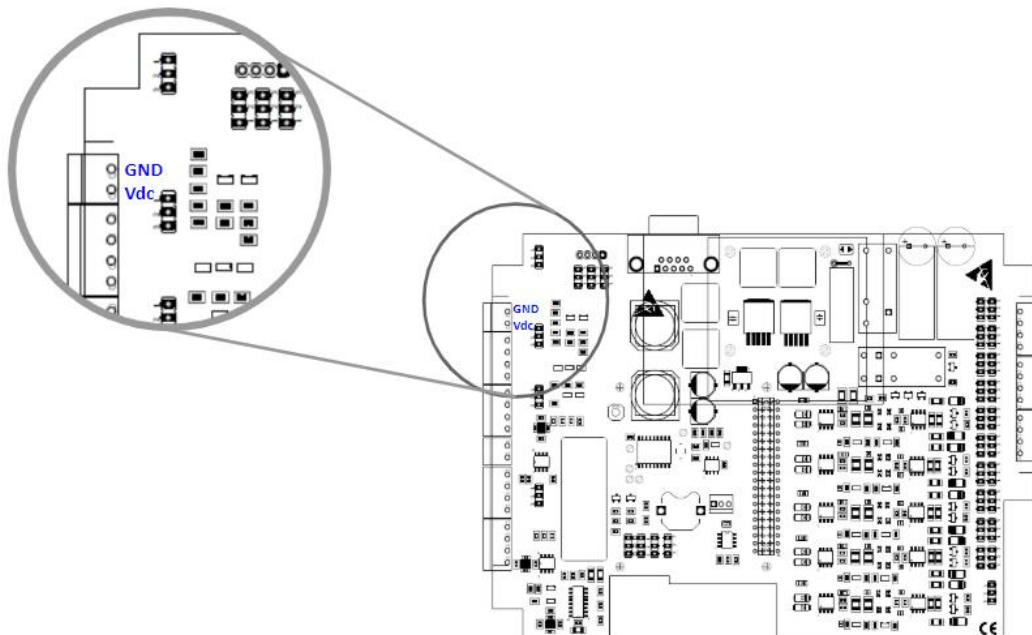

Find attached a picture regarding the position of the external power inputs:

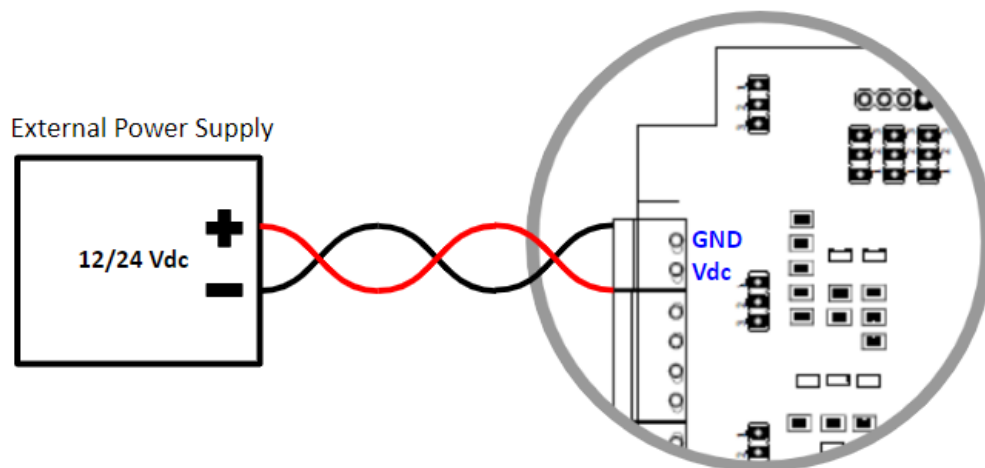

The standard, Part 1 of IEC 61010, sets the general safety requirements for the following types of electrical devices and their accessories, regardless of where use of the device is intended.

The equipment must be powered from an external power source in accordance with IEC 61010-1, whose output is MBTS and is limited in power according to section 9.4 of IEC 61010-1.

WARNING: Once the equipment is installed inside an electrical cabinet, the MTBS cables of the equipment must be separated from the dangerous voltage cables.

6 Hardware TEST

All the scripts showed in this section are installed on the Touchberry 7''

In order to test all the scripts in your 7'' Panel PC, you must activate before the SSH.

To activate it, you must go to:

Preferences -> Raspberry Configuration -> Activate SSH

SPI and I2C communications are disabled by default.

If you want to enable SPI and I2C communications, add the following lines to the /boot/config.txt file:

```
enable_uart=1
dtparam=spi=ON
dtparam=i2c_arm=ON
```

6.1.1 Common library TEST

There is a common library for all the test called *common.sh*. It defines common functions and pinout mappings to access them from the test scripts.

common.sh

```
#!/bin/bash

IOS="25 12 16 20 21 26 19 13 6 5"
SPI_CS0="8"
SPI_CS1="7"
INPUTS="${IOS}"
OUTPUTS="${IOS}"
FAN="18"

SERIAL_PORT="/dev/ttyS0"
RS485_PORT="${SERIAL_PORT}"
RS485_DE="27"
RS485_RE="17"
RS232_PORT="${SERIAL_PORT}"
TTL_PORT="${SERIAL_PORT}"

enable_io() {
    if [ ! -d "/sys/class/gpio/gpio${1}" ]; then
        echo "${1}" > "/sys/class/gpio/export"
    fi

    echo "${2}" > "/sys/class/gpio/gpio${1}/direction"
}

disable_io() {
    if [ -d "/sys/class/gpio/gpio${1}" ]; then
        echo "in" > "/sys/class/gpio/gpio${1}/direction"
        echo "${1}" > "/sys/class/gpio/unexport"
    fi
}
```

```

}

enable_input() {
    enable_io "${1}" "in"
}

disable_input() {
    disable_io "${1}"
}

read_input() {
    echo -n "ReadInput: gpio${1} = "
    cat "/sys/class/gpio/gpio${1}/value"
}

enable_output() {
    enable_io "${1}" "out"
}

disable_output() {
    disable_io "${1}"
}

set_output() {
    echo "1" > "/sys/class/gpio/gpio${1}/value"
}

clear_output() {
    echo "0" > "/sys/class/gpio/gpio${1}/value"
}

enable_serial() {
    DEV="${1}"
    RATE="${2}"
    SERIAL_RATE="${RATE}"
    SERIAL_DATABITS="8"
    if [ -n "${3}" ]; then
        DATABITS="cs${3}"
        SERIAL_DATABITS="${3}"
    fi
    if [ "${4}" = "even" ]; then
        PARITY="parenb -parodd"
        SERIAL_DATABITS=$((SERIAL_DATABITS + 1))
    elif [ "${4}" = "odd" ]; then
        PARITY="parenb parodd"
        SERIAL_DATABITS=$((SERIAL_DATABITS + 1))
    fi
    if [ "${5}" = "2" ]; then
        STOPBITS="cstopb"
        SERIAL_DATABITS=$((SERIAL_DATABITS + 2))
    else
        SERIAL_DATABITS=$((SERIAL_DATABITS + 1))
    fi
    SERIAL_DATABITS=$((SERIAL_DATABITS + 1)) # Start bit
    stty -F "${DEV}" ${RATE} ${DATABITS} ${PARITY} ${STOPBITS} ignpar ignbrk -brkint -
    icrnl -imaxbel -opost -onlcr -isig -icanon -iexten -echo -echoe -echok -echoctl -
    echoke noflsh -ixon -crtcts
}

send_serial() {
    echo -ne ${2} > ${1}
    SERIAL_DATALEN=$(echo ${2} | wc -c)
}

flush_serial() {
    T=$(echo "scale=3;${SERIAL_DATABITS} * ${SERIAL_DATALEN} / ${SERIAL_RATE}" | bc)
}

```



```
    sleep ${T}
}

receive_serial_byte() {
    dd if="${1}" bs=1 count=1 2> /dev/null
}

receive_serial() {
    dd if="${1}" bs=1 2> /dev/null
}

enable_rs485() {
    enable_serial "${RS485_PORT}" ${@}
    enable_output "${RS485_RE}"
    enable_output "${RS485_DE}"
    clear_output "${RS485_RE}"
    clear_output "${RS485_DE}"
}

disable_rs485() {
    disable_output "${RS485_RE}"
    disable_output "${RS485_DE}"
}

send_rs485_half() {
    set_output "${RS485_RE}"
    set_output "${RS485_DE}"
    send_serial "${RS485_PORT}" "${1}"
    flush_serial
    clear_output "${RS485_DE}"
    clear_output "${RS485_RE}"
}

receive_rs485_byte() {
    receive_serial_byte "${RS485_PORT}"
}

receive_rs485() {
    receive_serial "${RS485_PORT}"
}

enable_ttl() {
    disable_rs485
    enable_serial "${TTL_PORT}" ${@}
}

send_ttl() {
    send_serial "${TTL_PORT}" "${1}"
}

receive_ttl_byte() {
    receive_serial_byte "${TTL_PORT}"
}

receive_ttl() {
    receive_serial "${TTL_PORT}"
}
```

6.1.2 IOs TEST

There are two scripts related with the outputs *inputs.sh* and *outputs.sh*.

The *outputs.sh* script enables and disables the **output pins** (from IO0 to IO9) and the **SPI chip select pins** (CS0 and CS1) periodically.

The *inputs.sh* script checks the **input pins** (from IO0 to IO9) periodically and prints their status.

outputs.sh

```
#!/bin/bash

.common.sh

# Enable outputs pins
for output in ${OUTPUTS}; do
    echo "Enable GPIO${output}"
    enable_output "${output}"
done
echo "Enable CS0"
enable_output "${SPI_CS0}"
echo "Enable CS1"
enable_output "${SPI_CS1}"

# Blink
while true; do
    for output in ${OUTPUTS}; do
        echo "Set GPIO${output}"
        set_output "${output}"
        sleep 1
        echo "Clear GPIO${output}"
        clear_output "${output}"
        sleep 1
    done

    echo "Set CS0"
    set_output "${SPI_CS0}"
    sleep 1
    echo "Clear CS0"
    clear_output "${SPI_CS0}"
    sleep 1

    echo "Set CS1"
    set_output "${SPI_CS1}"
    sleep 1
    echo "Clear CS1"
    clear_output "${SPI_CS1}"
    sleep 1
done
```

inputs.sh

```
#!/bin/bash

.common.sh

# Enable IOs pins
for input in ${INPUTS}; do
    echo "Enable GPIO${input}"
    enable_input "${input}"
done

# Monitor
while true; do
    INPUTSVALUES=""
    for input in ${INPUTS}; do
        echo "Read GPIO${input}"
        VALUE="$(read_input ${input})\n"
        INPUTSVALUES+="${VALUE}"
    done
    echo -e "Inputs values:\n${INPUTSVALUES}"
    sleep 1
done
```

6.1.3 TTL TEST

The *ttl-periodic-sender.sh* script periodically sends a message through the **TTL serial** port.

The *ttl-receiver.sh* script prints the received messages from the TTL serial port.

It is possible to connect the TTL RX pin to the TTL TX pin and run both scripts at the same time.

ttl-periodic-sender.sh

```
#!/bin/bash

.common.sh

DATA="Hello TTL!\n"
PERIOD=1

enable_ttl 9600
while true; do
    echo "Send \"${DATA}\" using TTL"
    send_ttl "${DATA}"
    sleep "${PERIOD}"
done
```

ttl-receiver.sh

```
#!/bin/bash
. common.sh

enable_ttl 9600

echo "Receiving using TTL ..."
receive_ttl
```

6.1.4 RS-485 TEST

The *rs485-hd-periodic-sender.sh* script periodically sends a message through the **RS-485 port**, using the RS-485 communications port. It sends the data through the A and B pins.

The *rs485-receiver.sh* script prints the received messages from the RS-485 port, in half duplex.

In the half duplex mode, it is required another device to receive data from and send data to the panel PC.

rs485-hd-periodic-sender.sh

```
#!/bin/bash
. common.sh

DATA="Hello RS-485!\n"
PERIOD=1

enable_rs485 9600
while true; do
    echo "Send \"${DATA}\" using RS-485 half duplex"
    send_rs485_half "${DATA}"
    sleep "${PERIOD}"
done
```

rs485-receiver.sh

```
#!/bin/bash
. common.sh
enable_rs485 9600
echo "Receiving using RS-485 ..."
receive_rs485
```

6.1.5 Fan Test

12Vdc fan can be attached inside the Touchberry 7" using the fan connectors.

This sketch tests the fan operation by activating and deactivating it periodically:

```
#!/bin/bash
. common.sh

# Enable fan pin
enable_output "${FAN}"

# Enable/Disable
while true; do
  echo "Enable fan"
  set_output "${FAN}"
  sleep 1
  echo "Disable fan"
  clear_output "${FAN}"
  sleep 1
done
```

7 Installation and Maintenance

Notes for installation:

- The installation position should be free from the following: dust or oil smoke, conductive dust, corrosive or flammable gas, high temperature, condensation, and rain.
- Besides, vibration and impact also affect the Panel PC normal operation and shorten its lifespan; electric shock, fire or misact also damages the product. During drilling or wiring, prevent the metal particles or wire segments from falling into the PLC casing, which may cause fire, fault or misact.
- After the PLC installation, clean the ventilation duct to prevent blocking, which may cause bad ventilation, or even fire, faults or misact.
- Do not online connect, plug or unplug cables, which is apt to cause electric shock or damage the circuit. Installation and wire connection must be firm and reliable. Poor connection could cause misact.
- Use shielded twisted pair for the I/O of high frequency signal and analog signal to improve system IMS.

The installation environment should be free from dust, oil smoke, conductive particle, corrosive or flammable gases, high temperature, condensation, and rain.

Besides, vibration and impact also affect the Touchberry SPARTAN normal operation and shorten its lifespan. It is recommended to install the Panel PC, together with the matching switches and contactors, in a dedicated electric cabinet and keep the cabinet ventilated. If the location has high ambient temperature or heat generating equipment nearby, install forced convection devices on top or sides of the cabinet to avoid over-temperature. During drilling or wiring, prevent the metal particles or wire segments from falling into the PLC casing, which may cause fire, fault or misact. After the Panel PC installation, clean the ventilation duct to prevent blocking, which may cause bad ventilation, or even fire, faults or misact.

The only way to disconnect the equipment from the electrical network is by removing the connectors that feed the equipment. Once installed in the electrical cabinet it is very important to ensure the power connectors for proper operation.

Separate the Touchberry 7" SPARTAN from heat, high voltage and electrical noise:

Always separate the devices that generate high voltage and high electrical noise from the Touchberry 7" SPARTAN. When configuring the layout of the Panel PC inside your electrical box, consider the heat-generating devices and locate the electronic-type devices in the cooler areas of your cabinet. Reducing the exposure to a high-temperature environment will extend the operating life of any electronic device. Consider also the routing of the wiring for the devices in the electric cabinet. Avoid placing low-voltage signal wires and communications cables in the same tray with AC power wiring and high energy, rapidly-switched DC wiring.

Provide adequate clearance for cooling and wiring Panel PC. Is designed for natural convection cooling. For proper cooling, you must provide a clearance of at least 25 cm above and below the devices. Also, allow at least 25 cm of depth between the front of the modules and the inside of the enclosure.

Notes for maintenance:

A well-planned and executed maintenance program is essential to the satisfactory operation of solid-state electrical equipment. The kind and frequency of the maintenance operation will vary with the kind and complexity of the equipment as well as with the nature of the operating conditions. Maintenance recommendations of the manufacturer or appropriate product standards should be followed.

The following factors should be considered when formulating a maintenance program:

- Maintenance must be performed by qualified personnel familiar with the construction, operation, and hazards involved with the control.
- Maintenance should be performed with the control out of operation and disconnected from all sources of power.
- Care should be taken when servicing electrostatic sensitive components. The manufacturer's recommendations for these components should be followed.
- Ventilation passages should be kept open. If the equipment depends upon auxiliary cooling, e.g., air, water, or oil, periodic inspection (with filter replacement when necessary) should be made of these systems.
- The means employed for grounding or insulating the equipment from ground should be checked to assure its integrity.
- Accumulations of dust and dirt on all parts, including on semiconductor heat sinks, should be removed according to the manufacturer's instructions, if provided; otherwise, the manufacturer should be consulted. Care must be taken to avoid damaging any delicate components and to avoid displacing dust, dirt, or debris in a way that permits it to enter or settle into parts of the control equipment.
- Enclosures should be inspected for evidence of deterioration. Accumulated dust and dirt should be removed from the top of the enclosures before opening doors or removing covers.
- Certain hazardous materials removed as part of maintenance or repair procedure (e.g., polychlorinated biphenyls (PCBs) found in some liquidfilled capacitors) must be disposed of as described in Federal regulations.

Safety rules for maintenance personnel

Consider the following steps to follow. A false manoeuvre could be the cause of an accident or material damage.

Do not disassemble or modify the modules. This could lead to breakdowns or malfunctions and could lead to injuries or fire.

- All types of radio communication devices, including mobile phones and personal handy-phone systems (PHS), must be kept more than **25cm** away from the Panel PC in all directions. Failure to observe this precaution exposes malfunctions caused by excess of temperature.
- Disconnect the external power supply of the system (on all phases) before connecting or disconnecting a module. Failure to observe this precaution may cause faults or malfunctions of the module.

- Tighten the screws of the terminal ports and the screws of the connectors within the prescribed tightening torque. Insufficient tightening can lead to loose parts or wires and cause malfunctions. Excessive tightening can damage the screws and / or the module, with the risk of falling, short circuits and malfunctions.
- Before handling a module, dispose of the electrostatic charge accumulated by the human body by touching a suitable conductive object. Failure to observe this precaution may cause faults or malfunctions of the module.

Repair note:

If the equipment is suitable to be repaired, it must be verified that the equipment remains in a safe state after repair.

8 Revision Table

Revision Number	Date	Changes
0	10/11/2020	First implementation

About Industrial Shields:

Direction: Fàbrica del Pont, 1-11

Zip/Postal Code: 08272

City: Sant Fruitós de Bages (Barcelona)

Country: Spain

Telephone: (+34) 938 760 191 / (+34) 635 693 611

Mail: industrialshields@industrialshields.com