Datasheet Ardbox Analog HF WiFi & BLE





Technical Features CONECTABLE PLC ARDUINO 24Vcc ARDBOX

MODEL TYPE	Ardbox Analog HF WiFi & BLE
Input Voltage	12 to 24Vdc (Fuse protection (2.5A) Polarity protection)
Input rated voltage	24Vdc
Rated Power	30 W
I max.	1.5A
Size	100x45x115
Clock Speed	16MHz
Flash Memory	32KB of which 4KB used by bootloader
SRAM	2.5KB
EEPROM	1KB
Communications	I2C, USB, RS485, RS232, SPI (2x) Rx, Tx (Arduino pins), WiFi, BLE Max232-Max485-W5500
USB consideration!	Only for uploading or debugging. NOT connected as a serial Cannot be working in a final application

General Features

0011010111000100		
Power supply voltage	DC power supply	12 to 24Vdc
Operating voltage range	DC power supply	11.4 to 25.4Vdc
Power consumption	DC power supply	30 W MAX.
External power supply	Power supply voltage	24Vdc
	Power supply voltage	700Ma
Insulation resistance	20MΩ min.at 500Vdc between the AC terminals and the protective earth terminal.	
Dielectric strength	2.300 VAC at 50/60 Hz for one minute with a leakage current of 10mA max. Between all the external AC terminals and the protective ground terminal.	
Shock resistance	80m/s2 in the X, Y and Z 2 times each.	direction
Ambient temperature (operating)	0° to 60°C	
Ambient humidity (operating)	10% to 90% (no condensa	tion)
Ambient environment (operating)	With no corrosive gas	
Ambient temperature (storage)	-20° to 60°C	
Power supply holding time	2ms min.	
Weight	350g max.	

🕲 Industrial www.industrialshields.com HD-FD I0.8/RS-485 DE 00.6 RS-485 DE/IO.8 00.5 10.9/RS-485 RE Q0.4 **SWITCH SWITCH** RS-485 RE/I0.9 0.01\SI-AIZ **Q**0.3 ZONE ZONE SCL-D3/Q0.6 200 00.1 B- RX Q0.0 A0.5 A0.4 SCL-PIN3 A0.3 SDA-PIN2 A0.2 TX-PIN4 11 A0.1 13 RX-PINB GND 5V 00.9 RESET 00.8 K SCK Q0.7 WIFI IZDM 20.6 DISIM 00.5 Q0.4 00.3 18 10.8 10.7 202 19 Q0.1 20 10.6 10.5 20.0 **GNDCon** 10.4 23 24VCom 10.3 10.2 GND 12 I0.1 24V ARDUINO PIN RS485 HS* HS*: Hardware Serial SS*: Software Serial

● INPUTS (x10)

O 1111 O 110 (111	,
An/Dig Input 10bit (0-10Vcc) - (x6)	0 to 10Vac Input Impedance: 39K Separated PCB ground Rated Voltage: 10Vac 7 to 24Vdc I mir: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc
Digital Input (24Vcc) - (x3)	7 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc
Interrupt Input HS (24Vcc) * - (x1) * The Interrupt isolated Inputs can also work as Digital isolated Inputs	7 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc
Expandability	
I2C - 127 elements - Seria	al Port RS232/RS485

DIGITAL/PWM OUT ANALOG OUT DIGITAL/ANALOG IN ANALOG/DIGITAL CONFIGURATION SWITCH COMUNICATION SWITCH COMUNICATION SWITCH 2 ARDUINO PIN ARDBOX FUNCTION SWITCH CONF. ISOLATED



① OUTPUTS (x8)

•	
Analog Output 8bit (0-10Vcc) - (x7) • The Analog outputs can also work as Digital outputs	0 to 10Vac I max: 20 mA Separated PCB ground Rated Voltage: 10Vac
Digital Isolated Output (24Vcc) - (x10)	5 to 24Vdc I max 70 mA Galvanic Isolation Diode Protected for Relay Rated Voltage: 24Vdc
DWW looleted	E to 241/do

PwwM Isolated
Output 8bit (24Vcc)
- (x7)
- The PWM outputs can also work as Digital outputs

5 to 24Vdc
I max 70 mA
Galvanic Isolation
Diode Protected for Relay
Rated Voltage: 24Vdc





Performance Specifications

Arduino Board	Arduino Leonardo	
Control method	Stored program method	
I/O control method	Combination of the cyclic scan and immediate refresh processing methods.	
Programming language	Arduino IDE. Based on wiring (Wiring is an Open Source electronics platform composed of a programming language. "similar to the C")	
Microcontroller	ATmega32U4	
	http://arduino.cc/en/Tutorial/HomePage	

Install Arduino IDE and the Industrial Shields boards

The steps to follow to install our equipment's to Arduino IDE are:

• Open the Arduino IDE, versión 1.8.0 or superior. If you don't have it yet, you can download here

https://www.arduino.cc/en/Main/Software.

- Press the "Preferences" option to "File" menu and open the preferences window.
- In the text box "Additional boards manager URLs", add the direction: http://apps.industrialshields.com/main/arduino/boards/package_industrialshields_index.json
- · Close the preferences window with the "OK" button.
- Click on "Tools" menu, and open the "Boards" submenu, and click the "Boards Manager" option, to open the Boards Manager window.
- Search "industrialshields" to the search filter and select to the list and click "Install"
- Close the "Boards Manager". Once it is performed that steps, you are available to select each PLC that you wish to work on "Tools" -> "Boards": M-Duino...

To get more information:

https://www.industrial shields.com/first-steps-with-the-industrial-arduino-based-plc-s-and-the-panel-pc-s-raspberry-pi-based#boards

Warnings



Unused pins should not be connected. Ignoring the directive may damage the controller.

Before using this product, it is the responsibility of the user to read the product's User Guide and all accompanying documentation.

Industrial Shields PLCs must be powered between 12Vdc and 24Vdc. If a higher voltage is supplied to the equipment can suffer irreversible damage.

Maintenance must be performed by qualified personnel familiarized with the construction, operation, and hazards involved with the control.

Maintenance should be performed with the control out of operation and disconnected from all sources of power.

The Industrial Shields Family PLCs are Open Type Controllers. It is required that you install the M-Duino PLC in a housing, cabinet, or electric control room. Entry to the housing, cabinet, or electric control room should be limited to authorized personnel.

Inside the housting, cabinet or electric control room, the Industrial Shields PLC must be at a minimum distance from the rest of the components of a minimum of 25 cm, it can be severely damaged.

Failure to follow these installation requirements could result in severe personal injury and/or property damage. Always follow these requirements when installing M-Duino family PLCs.

In case of installation or maintenance of the M-Duino please follow the instructions marked in the Installation and Maintenance section on the User Guide

Do not disconnect equipment when a flammable or combustible atmosphere is present.

Disconnection of equipment when a flammable or combustible atmosphere is present may cause a fire or explosion which could result in death, serious injury and/or property damage.

Symbology

	Indicates that the equipment is suitable for direct current only; to identify relevant terminals
\sim	Indicates that the equipment is suitable for alternating current only, to identify relevant terminals
	To identify the control by which a pulse is started.
<u></u>	To identify an earth (ground) terminal in cases where neither the symbol 5018 nor 5019 is explicily required.
\otimes	To identify the switch by means of which the signal lamp(s) is (are) switched on or off.
C€	CE marking indicates that a product complies with applicable European Union regulations
<u> </u>	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
4	To indicate hazards arising from dangerous voltages

Technical Support

You can contact with us using the best channel for you:



support@industrialshields.com



www.industrialshields.com



Visit our Blog, Forum or Ticketing system



34 644 927 900



Use our chat service



Check the user guides



Visit our Channel

